

rescueME PLB1 Flap Replacement

Pack Contents

Spring [1]	1
Axel [2]	1
Label [3]	1



Disassembly

Carefully peel off the right hand side label (headed “Lithium Battery 9V WARNING”).

Fold the flap right back and push down [Figure 1]. This will pop the clips at the bottom of the retainer out. The retainer may now be pushed upwards to release the flap and spring [Figure 2].



Figure 1: Fold flap back



Figure 2: Push retainer up

Remove the axel and spring from the flap assembly and discard. Clean and dry the flap and retainer thoroughly.

Reassembly

With the spring oriented as shown in Figure 3, insert the new axel into the flap. Once the axel is in place, fully insert the end of the spring into the smaller hollow section of the flap, adjacent to the axel [Figure 4].



Figure 3: Insert axel



Figure 4: Fully insert spring

Place the new flap assembly onto the PLB body, ensuring the spring is in place as shown in Figure 5.

Push the retainer back into place, making sure it is fully down and the clips are in place [Figure 6]. Check the flap is free to move and springs back into place correctly.



Figure 5: Spring position



Figure 6: Push retainer down

Clean away any residue left behind from the previously removed label, and attach the new one.