

LB2E Installation Instructions

The following procedure describes fitting the battery to the EPIRB.

1. The battery is supplied with a small white plastic strip, which will allow trapped air to be released when the battery is fitted. Take the strip and hold it on the battery as shown below.



Note: The strip of plastic should be aligned with the location indent on the battery and cover the black O- ring, but not go past the top of the battery.

2. Place the battery into the EPIRB body, ensuring that the plastic strip passes under the alignment tab on the body.



3. Push the battery home and **lightly** tighten the bolt with the supplied Hex (Allen)



key.

4. Use a torque driver set to 1.7 N m to fully tighten the battery screw.

Do NOT overtighten the screw as this will cause damage to the battery and cause premature failure

5. When the bolt is tight, pull the plastic strip out of the battery.



6. Carry out a self test, as described in section 6 of the user manual.

Note: the self test should only be carried out during the first five minutes of each hour.

Your EPIRB is now ready for use.